

Overview

AirCare Automation's ACC2 Console Series intelligently monitors and controls an AirCare *VariPhase*TM or ACM control network. The console provides communication (MODBUS-RTU platform), unit control, and system monitoring in one easy-to-use package.

With the AirCare *Console*TM no programming is necessary to install a network. Once the console has automatically scanned the network, only a few simple configuration selections are required.

The multi zone AirCare *Console*TM has 4 models that can control up to 125, 250, 375, or 500 VariPhase/ACM addresses.

Main Functions

- Individual speed adjustment
- Global speed adjustment
- Zone set-back speed adjustment
- Central monitoring of fault sensors (pressure drop on AC, RPM drop on EC type)
- Menu driven configuration options
- Monitors units and identifies error modes

Features

- Easy wall-mount
- 4 access levels to control modifications
- Simple User Interface
 - 7-segment and Bitmapped LED displays
 - Dual rotary encoders for selection and adjustment
 - Menu Push Switch
 - Enter/Exit Menu
- Supports medium to large scale networks
 - RS485 (2 wire)
 - Up to 125 Motor Controls per Zone

Specifications

- Supply Voltage : 8-13Vdc
- Typical Supply Current : 280mA
- Network transceivers : 2-wire 1/8" unit load type
- Operating Temperature : 0-40degC
- Electrical Connections
 - DC Power Connector : 2.1mm DC power jack
 - MODBUS network : RJ45 socket

 


Installation

The AirCare *Console*TM can be mounted on a wall or any other surface requiring a DC source of power from a plug-in source (supplied) or from the network bus (ACM1008). Connections to the network are made through an RJ-45 connection using CAT5 cable/connections.

Console Operation: Front Panel View

Console Operation

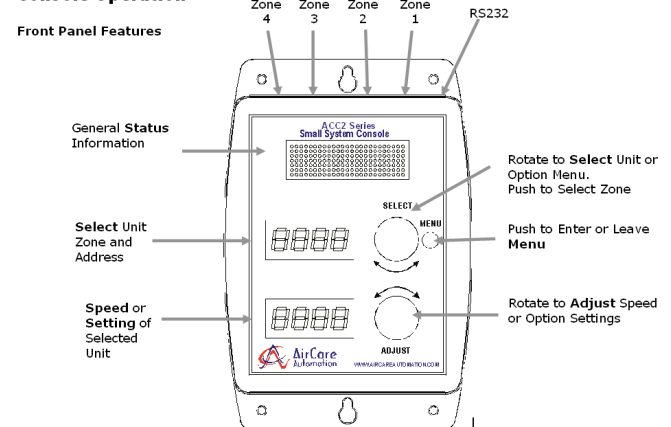

Network Wiring

A network is constructed by simple daisy-chain between the ACC2-xxx and the unit controls.


Network cable requirements should be specified based on:

- Distance between nodes
- Total network length
- Noisy electrical environment
- Environmental conditions
- Mechanical issues


Pre-terminated cables, available from AirCare Automation, are suitable for many small system installations.

Upon power-up the console will automatically scan the network for VariPhase controls.

 ACC2-xxx System Diagram

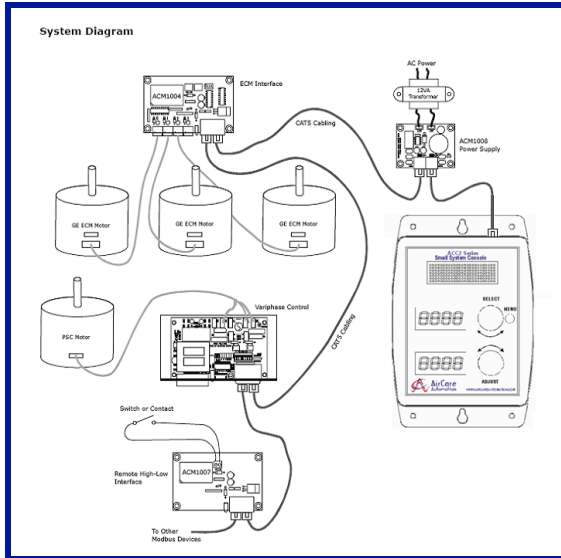

Mechanical Dimensions

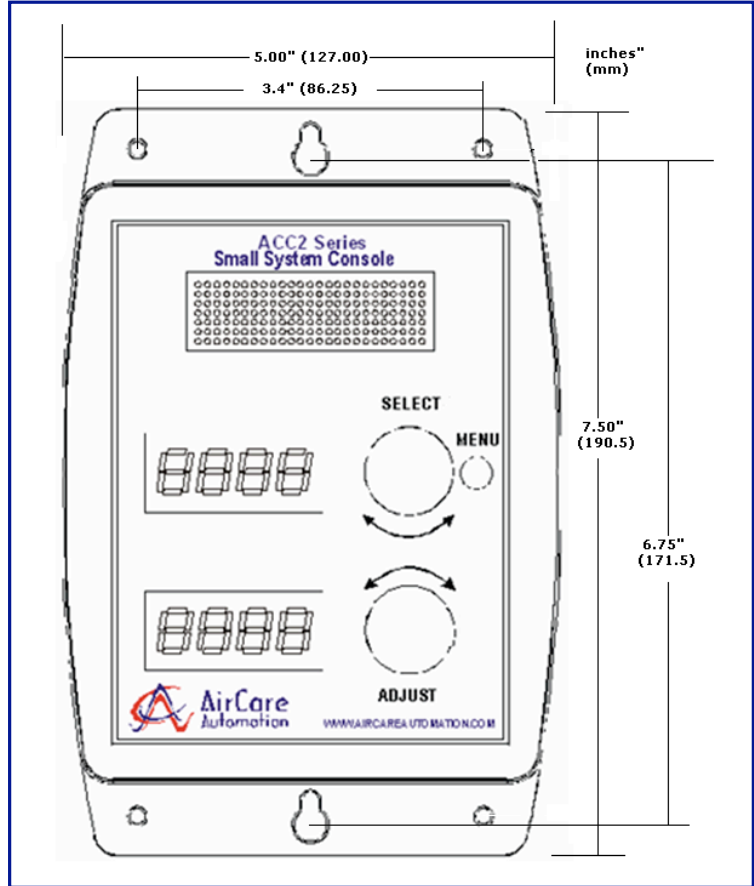 

Mounting Instructions (2 options)

Permanent Installation: Using the 4 outer holes on the ACC2 to permanently mount the ACC2 to any desired location. *Please note that a wall outlet must be near the location mounted if the ACC1 is powered through a wall adaptor. Alternate approach is to power the ACC2-xxx through the CAT5 cable.*

Removable Installation: The key holes in the center of the ACC2 can be used to “hang” the ACC2 in any location desired.

** NOTE: most AirCare controllers have memory of the set point and provide local control of their motor/fan– removing the ACC2-xxx will *not* shut down system. System will continue to run until ACC2-xxx is reconnected and set-point modified**